

This document is not an API Standard; it is under consideration within an API technical committee but has not received the approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, without the approval of the Chairman of the committee having jurisdiction. Copyright © 2010 API. All rights reserved.

Determination of Water and/or Sediment in Crude Oil by the Centrifuge Method (Field Procedure)

API MANUAL OF PETROLEUM MEASUREMENT STANDARDS

CHAPTER 10.4

PROPOSED FIFTH EDITION, DATE

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Determination of Water and/or Sediment in Crude Oil by the Centrifuge Method (Field Procedure)

Contents

1	Scope.....
2	Normative References.....
3	Terms and Definitions
4	Significance and Use
5	Test Solvents.....
5.1	General.....
5.2	Use of Solvents.....
6	Demulsifier.....
7	Apparatus
7.1	Centrifuge
7.2	Centrifuge Tubes
7.3	Preheater.....
7.4	Sample Thermometer.....
8	Sampling.....
9	Procedure
9.1	General.....
9.2	Determination of Water and Sediment.....
9.3	Determination of Sediment Only.....
10	Calculation and Reporting of Results.....
10.1	General.....
10.2	100-milliliter (mL) Tubes
10.3	200-part Tubes.....
11	Precision
12	Bias.....
	Annex A (informative) Precautionary Information
	Annex B (informative) Demulsifiers and Water Saturation of Solvents.....
	Annex C (normative) Specifications for Centrifuge Tubes.....
	Annex D (informative) Abbreviated Procedure & Calculations—Determination of Water and Sediment
	Annex E (informative) Abbreviated Procedure & Calculations—Determination of Sediment Only
	Bibliography

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Contents

Figures

1	Reading a 100-mL Centrifuge Tube
2	Reading a 200-Part Centrifuge Tube
C-1	8-in. (203-mm) Cone-Shaped Centrifuge Tube
C-2	6-in. (167-mm) Cone-Shaped Centrifuge Tube

Tables

1	Rotation Speeds Necessary to Produce a Relative Centrifugal Force of 500 g for Centrifuges of Various Diameters of Swing.
2	Procedure for Reading a 100-mL Cone-Shaped Tube.....
3	Procedure for Reading a 200-Part Cone-Shaped Tube
4	Allowable Difference between Results from Two 100-milliliter (mL) Tubes
5	Allowable Difference between Results from Two 200-Part Tubes
6	Calculation and Reporting of Results
C-1	Minimum Graduation Requirements and Maximum Calibration Tolerances for 8-in. (203-mm) Cone-Shaped Tubes.....
C-2	Minimum Graduation Requirements and Maximum Calibration Tolerances for 6-in. (167-mm) Cone-Shaped Tubes

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Determination of Water and/or Sediment in Crude Oil by the Centrifuge Method (Field Procedure)

1 Scope

1.1 This section describes the field centrifuge method for determining both water and sediment or sediment only in crude oil. This method may not always produce the most accurate results, but it is considered the most practical method for field determination of water and sediment. This method may also be used for field determination of sediment. When a higher degree of accuracy is required, the laboratory procedure described in API MPMS Ch. 10.3, *Standard Test Method for Water and Sediment in Crude Oil by the Centrifuge Method (Laboratory Procedure)* (ASTM D4007); API MPMS Ch. 10.2, *Standard Test Method for Water in Crude Oil by Distillation* (ASTM D4006); or API MPMS Ch. 10.9, *Standard Test Method for Water in Crude Oils by Coulometric Karl Fischer Titration* (ASTM D4928); and the procedure described in API MPMS Ch. 10.1, *Standard Test Method for Sediment in Crude Oils and Fuel Oils by the Extraction Method* (ASTM D473) or API MPMS Ch. 10.8, *Standard Test Method for Sediment in Crude Oil by Membrane Filtration* (ASTM D4807) should be used.

1.2 The requirements of this standard may involve hazardous materials, operations, and equipment. This standard does not purport to address all of the safety problems associated with its use. The user of this standard has the responsibility for establishing appropriate safety and health practices and determining the applicability of regulatory limitations prior to use.

2 Normative References

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

API MPMS Chapter 8.1, *Manual Sampling of Petroleum and Petroleum Products*

API MPMS Chapter 8.2, *Automatic Sampling of Petroleum and Petroleum Products*

API MPMS Chapter 8.3, *Standard Practice for Mixing and Handling of Liquid Samples of Petroleum and Petroleum Products (includes Errata 1 dated March 1996)*

API MPMS Chapter 10.1, *Standard Test Method for Sediment in Crude Oils and Fuel Oils by the Extraction Method*

API MPMS Chapter 10.2, *Standard Test Method for Water in Crude Oil by Distillation*

API MPMS Chapter 10.3, *Standard Test Method for Water and Sediment in Crude Oil by the Centrifuge Method (Laboratory Procedure)*

API MPMS Chapter 10.8, *Standard Test Method for Sediment in Crude Oil by Membrane Filtration*

API MPMS Chapter 10.9, *Standard Test Method for Water in Crude Oils by Coulometric Karl Fischer Titration*

ASTM D473¹, *Standard Test Method for Sediment in Crude Oils and Fuel Oils by the Extraction Method*

ASTM D3699, *Standard Specification for Kerosine*

¹ ASTM International, 100 Barr Harbor Drive, West Conshohocken, Pennsylvania 19428, www.astm.org.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

ASTM D4006, *Standard Test Method for Water in Crude Oil by Distillation*

ASTM D4007, *Standard Test Method for Water and Sediment in Crude Oil by the Centrifuge Method (Laboratory Procedure)*

ASTM D4057, *Standard Practice for Manual Sampling of Petroleum and Petroleum Products*

ASTM D4177, *Standard Practice for Automatic Sampling of Petroleum and Petroleum Products*

ASTM D4807, *Standard Test Method for Sediment in Crude Oil by Membrane Filtration*

ASTM D4928, *Standard Test Method for Water in Crude Oils by Coulometric Karl Fischer Titration*

ASTM D5854, *Standard Practice for Mixing and Handling of Liquid Samples of Petroleum and Petroleum Products (includes Errata 1 dated March 1996)*

ASTM E542, *Standard Practice for Calibration of Laboratory Volumetric Apparatus*

3 Terms and Definitions

For the purposes of this document, the following definitions apply.

3.1 sediment

A material that normally exists in crude oils as extremely fine, well dispersed solids that originate in the reservoir from which the crude came, or in drilling fluids used to drill the wells, which may take the form of sand, clay, shale, or rock particles. Other sediments such as scale can be picked up from tubing, pipe, tanks, and other production and transportation equipment. Sediment, as defined in this standard, shall have a density greater than water and will not float at test conditions.

3.2 demulsifier-stock solution

A mixture of demulsifier and solvent in a fixed ratio (e.g. 25 % to 75 %) which is added to the test solvent to form a solution to cause a clear and distinct separation between the oil and water interface.

3.3 demulsifier-solvent solution

A mixture of any one of the approved solvents and a demulsifier, or a demulsifier-stock solution which is used as a diluent to help the separation of water and sediment from the sample being tested.

3.4 solvent

Any one of the approved liquids capable of dissolving the hydrocarbon fraction of the crude oil to form a solution. A solvent is added to reduce the viscosity of the crude oil and promote separation of the crude oil hydrocarbons from the water and sediment in the sample being tested.

4 Significance and Use

A determination of water and/or sediment content is required to accurately determine the net volumes of crude oil involved in sales, taxation, exchanges, inventories, and custody transfers. An excessive amount of water and/or sediment in crude oil is significant because it can cause corrosion of equipment and problems in processing and

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

transporting, and may violate federal, state, or municipal regulations.

For determination of both water and sediment, known volumes of crude oil, demulsifier, and solvent (water-saturated if required) are placed in a centrifuge tube and heated to $60\text{ }^{\circ}\text{C} \pm 3\text{ }^{\circ}\text{C}$ ($140\text{ }^{\circ}\text{F} \pm 5\text{ }^{\circ}\text{F}$). After centrifuging, the volumes of sediment and water at the bottom of the tube are read. For some crude oils, temperatures of $71\text{ }^{\circ}\text{C}$ ($160\text{ }^{\circ}\text{F}$) or higher may be required to completely melt wax crystals in crude oils. Temperatures shall be maintained above the cloud point of the crude oil being tested.

For determination of sediment only, known volumes of crude oil, solvent, demulsifiers, and water are placed in a centrifuge tube and heated to $71\text{ }^{\circ}\text{C} \pm 3\text{ }^{\circ}\text{C}$ ($160\text{ }^{\circ}\text{F} \pm 5\text{ }^{\circ}\text{F}$). After centrifuging, the volume of the sediment at the bottom of the tube is read.

5 Test Solvents

5.1 General

Kerosine, Stoddard solvent, toluene, and xylene are satisfactory for use in field testing. Solvents and demulsifiers are mixed with samples in the centrifuge tubes to reduce the viscosity and to allow water and sediment to separate and fall to the tip of the tube during the testing procedure. Also, solvents are used to help dissolve paraffin and asphaltenes to prevent them from being centrifuged to the tip of the tube and included in the test results. Different types of crude oil may require the use of different solvents to obtain accurate results. For example, kerosine and Stoddard solvent will not dissolve asphaltenes.

Testing should be performed to determine the best solvent to use on a particular crude type.

Annex A contains general information regarding the physical characteristics of these solvents, as well as fire, safety, and health considerations relating to their use. Kerosine shall meet the specifications of ASTM D3699.

Information concerning physical characteristics, safety and health risks, and proper precautions with respect to particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

5.2 Use of Solvents

Toluene and xylene shall be saturated with water at the test temperature used, and maintained at that temperature until used. A procedure for the saturation of solvents is given in Annex B. The water-saturated solvent shall be free from suspended water at the time of use. Toluene or xylene is recommended for water and sediment determinations involving asphaltenic crude oils.

Stoddard solvent and kerosine do not have to be saturated with water, since the solubility of water in these solvents is not significant at the test temperature.

6 Demulsifier

Unless the results of testing indicate that a demulsifier is not required for a particular crude type, demulsifiers shall be used to promote the separation of water from the sample and make it easier to read the water/oil interface. Demulsifiers should be mixed according to the manufacturer's recommendations and should not add to the volume of sediment and water determined. The demulsifier shall always be used in the form of a demulsifier stock solution or be premixed with the solvent to be used in the test. The ratio of demulsifier to solvent should be recorded in order to be able to duplicate results if necessary. Testing should be done to determine which demulsifier provides the best results with a specific crude type. See Annex A and B for further information about demulsifiers.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

7 Apparatus

7.1 Centrifuge

A centrifuge shall be capable of spinning two or more centrifuge tubes at a speed that can be controlled to give a minimum relative centrifugal force of 500 g at the tip of the tubes. The rotation speed necessary to produce a relative centrifugal force of 500 g for various diameters of swing can be determined from Table 1 or from the following equation:

$$\text{rpm} = \alpha \sqrt{\frac{rcf}{d}} \quad (1)$$

where

rpm is the rotation speed in revolutions per minute,

rcf is the relative centrifugal force in multiples of gravity,

d is the diameter of swing, in millimeters or inches, measured between the tips of opposite tubes when the tubes are in their fully extended rotating position,

α is 1335 rpm for *d* in millimeters, and 265 rpm for *d* in inches.

Table 1—Rotation Speeds Necessary to Produce a Relative Centrifugal Force of 500 g for Centrifuges of Various Diameters of Swing

Diameter of swing “ <i>d</i> ” ^a		Rotation Speed (revolutions per minute)
Millimeters	Inches	
305	12	1710
330	13	1640
356	14	1580
381	15	1530
406	16	1480
432	17	1440
457	18	1400
483	19	1360
508	20	1325
533	21	1290
559	22	1260
584	23	1240
610	24	1210

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

^a Measured between the tips of opposite tubes when the tubes are in their fully extended rotating position.

The revolving head, trunnion rings, and trunnion cups, including the cushions, shall be constructed to withstand the maximum centrifugal force capable of being delivered by the power source. The trunnion cups and cushions shall firmly support the tubes when the centrifuge is in motion. The centrifuge shall be enclosed by a metal shield or case strong enough to contain flying debris in the event a tube breaks or the centrifuge malfunctions.

The centrifuge machine shall be heated and be capable of maintaining the sample within 8 °C (15 °F) of the test temperature. For example, the minimum acceptable temperature after centrifuging is 52 °C (125 °F) at a test temperature of 60 °C (140 °F) or 63 °C (145 °F) at a test temperature of 71 °C (160 °F).

7.2 Centrifuge Tubes

Centrifuge tubes shall be cone-shaped and 8 in. (203 mm) or 6 in. (167 mm) in length. Tubes shall conform to the dimensions given in Annex C and shall be made of thoroughly annealed glass. The tube graduation marks' accuracy shall be volumetrically verified or gravimetrically certified before field use of the tube, in accordance with ASTM E542, using National Institute of Standards and Technology (NIST) or other internationally accepted traceable equipment.

The 6 in. tubes are more commonly used in field applications due to the smaller size and weight of the centrifuge required. The 8 in. tubes are easier to read due to the increased spacing of the graduations. In either case the tubes can be 100-mL or 200-part tubes. The computation methods for the total percent of sediment and water are different based on the type of tube selected. For 100-mL tubes, the sediment and water volume readings from each tube are added. For 200-part tubes, the sediment and water volume readings from each tube are averaged. See Figure 1 for example of a 100-mL tube and Table 2 for how to read a 100-mL tube. See Figure 2 for an example of a 200-part tube and Table 3 for how to read a 200-part tube.

7.3 Preheater

The preheater shall be either a metal block or a liquid bath of sufficient depth to permit immersion of the centrifuge tube in the vertical position to the 100-mL (200-part) mark and capable of heating the sample to 71 °C ±3 °C (160 °F ±5 °F).

7.4 Sample Thermometer

A sample thermometer shall have graduations at intervals of 1 °C (2 °F) or less and shall be accurate to ±0.5 °C (±1 °F). A bi-metal, dial-type thermometer is normally used.

8 Sampling

Sampling is defined as all steps required to obtain a representative quantity of the contents of any pipeline, tank, or other system and to place it, with care, in an appropriate analytical device, such as a centrifuge tube, to maintain its compositional integrity prior to testing.

Samples obtained and handled as specified in API *MPMS* Ch. 8.1 (ASTM D4057), Ch. 8.2 (ASTM D4177), and Ch. 8.3 (ASTM D5854) shall be used for this method.

9 Procedure

9.1 General

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

The centrifuge sediment and water test consists of the following basic activities:

- Dispensing of crude oil aliquots from the same, previously mixed crude oil sample into two centrifuge tubes
- Addition of solvent and demulsifier to each tube
- Heating and centrifuging the contents of the respective tubes to a designated test temperature
- Reading of the results from the respective tubes
- Calculation and reporting of the final test results (Section 10)

The test is valid only if the results for each tube from two successive centrifuging operations are consistent and the difference in the test results from the respective tubes is less than a designated tolerance.

The test is invalid if the oil/water interface is not clear and distinct, or a distinguishable layer is present above the interface.

When the crude oil aliquots are introduced into the tubes prior to the solvent, care must be taken to ensure that precisely 50 milliliters (mL) (100 parts) of crude oil is dispensed into each tube. In this case, the volume of the solvent (and demulsifier) is less critical as it only acts as a diluent and any inaccuracy in the quantity of solvent added will not affect the test results.

In cases where the crude oil is very viscous, the solvent may be dispensed into each tube prior to the crude oil to enhance mixing. In such cases, care must be taken to ensure each centrifuge tube is filled exactly to the 50-milliliter (100-part) mark with solvent and then exactly to the 100-milliliter (200-part) mark with crude oil.

Due to the opaqueness of the liquid, a centrifuge tube must be read at the top of the meniscus when establishing the quantity of crude oil introduced into the tube. It is recognized that reading the top of the meniscus will result in a bias error in the test result which may or may not be significant, depending upon the water and/or sediment content. The magnitude of the bias error may be approximated from an estimate of volume error associated with the depth of the meniscus at the 50 mL (100-part) mark of each centrifuge tube as follows:

$$\text{Error in Observed Reading (mL)} = \text{Obs. Reading (mL)} * \{ 1 - [50 \text{ mL} / (50 \text{ mL} - \text{Estimated Volume Error (mL)})] \}$$

$$\text{Error in Observed Reading (parts)} = \text{Obs. Reading (parts)} * \{ 1 - [100 \text{ parts} / (100 \text{ parts} - (2 \text{ parts/mL} * \text{Estimated Volume Error (mL)))] \}$$

Given an estimated volume error of 0.6 mL at the 50 mL (100 part) mark of a 6-inch centrifuge tube, the bias error in the test result for each tube may be approximated as follows:

$$\text{Error in Observed Reading (mL)} = (-0.01215) * \text{Observed S\&W Reading (mL)}$$

$$\text{Error in Observed Reading (parts)} = (-0.01215) * \text{Observed S\&W Reading (parts)}$$

The use of stoppers during the procedure may help to maintain the representativeness of the crude oil aliquots.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

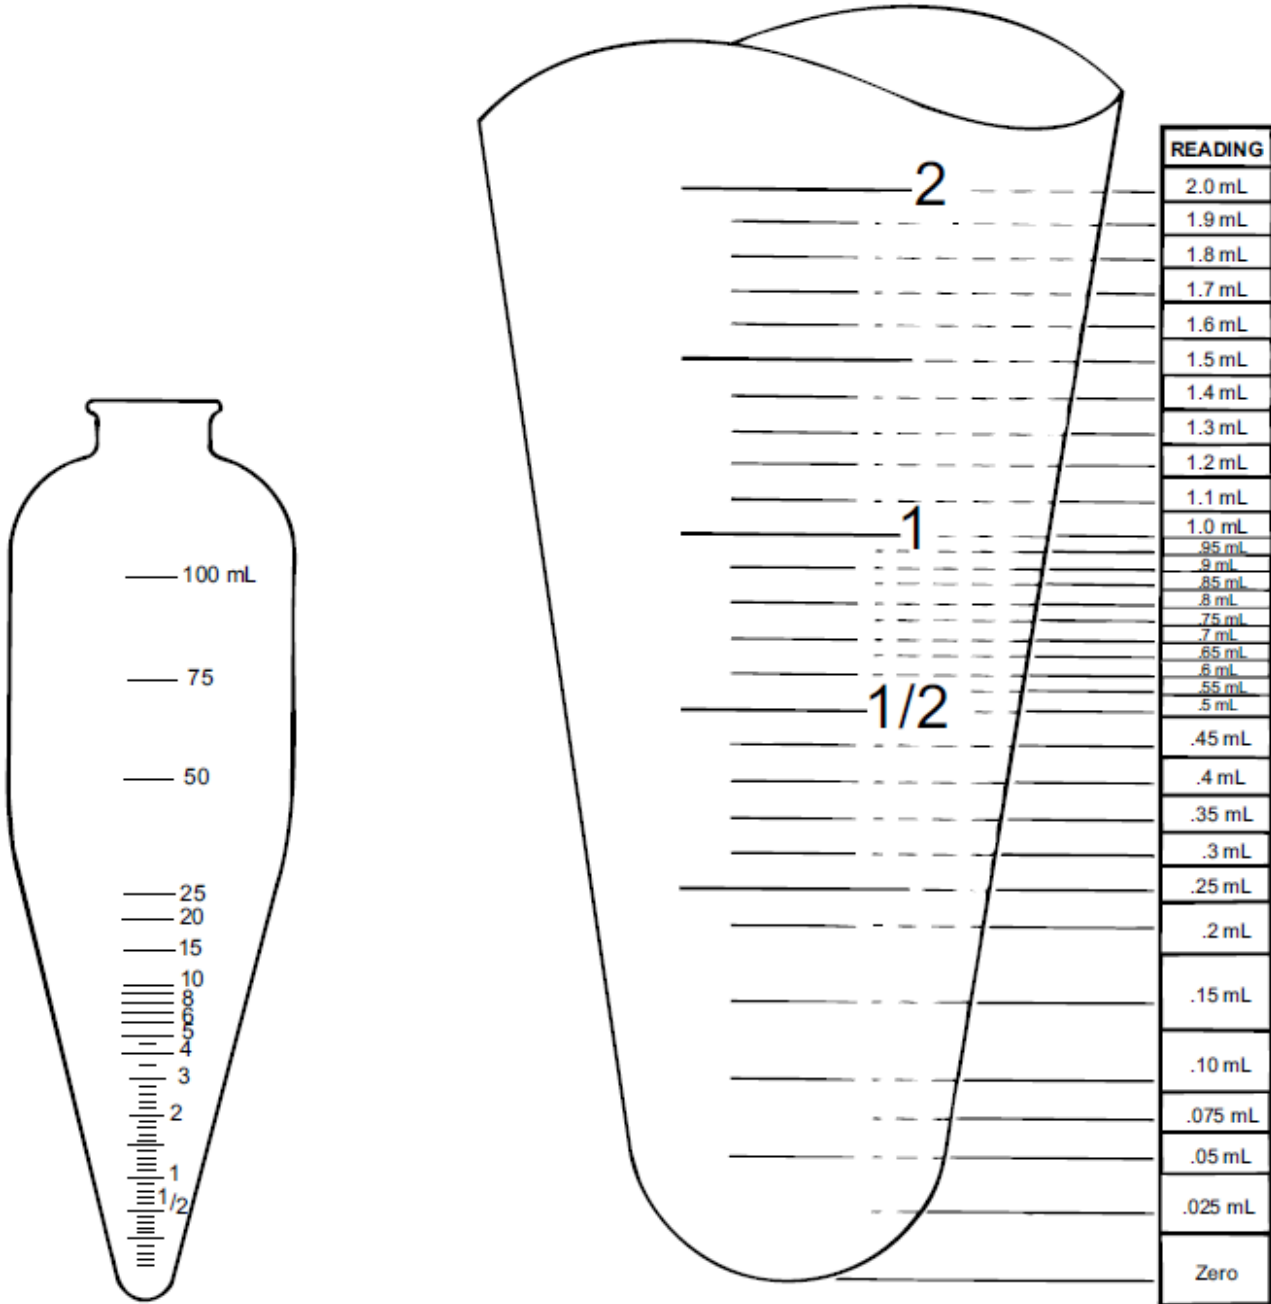


Figure 1—Reading a 100-mL Centrifuge Tube

Table 2—Procedure for Reading a 100-mL Cone-Shaped Tube

Volume (mL)	Read to Nearest (mL)
0.0 to 0.1	0.025
0.1 to 1.0	0.050

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

> 1.0	0.100
-------	-------

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

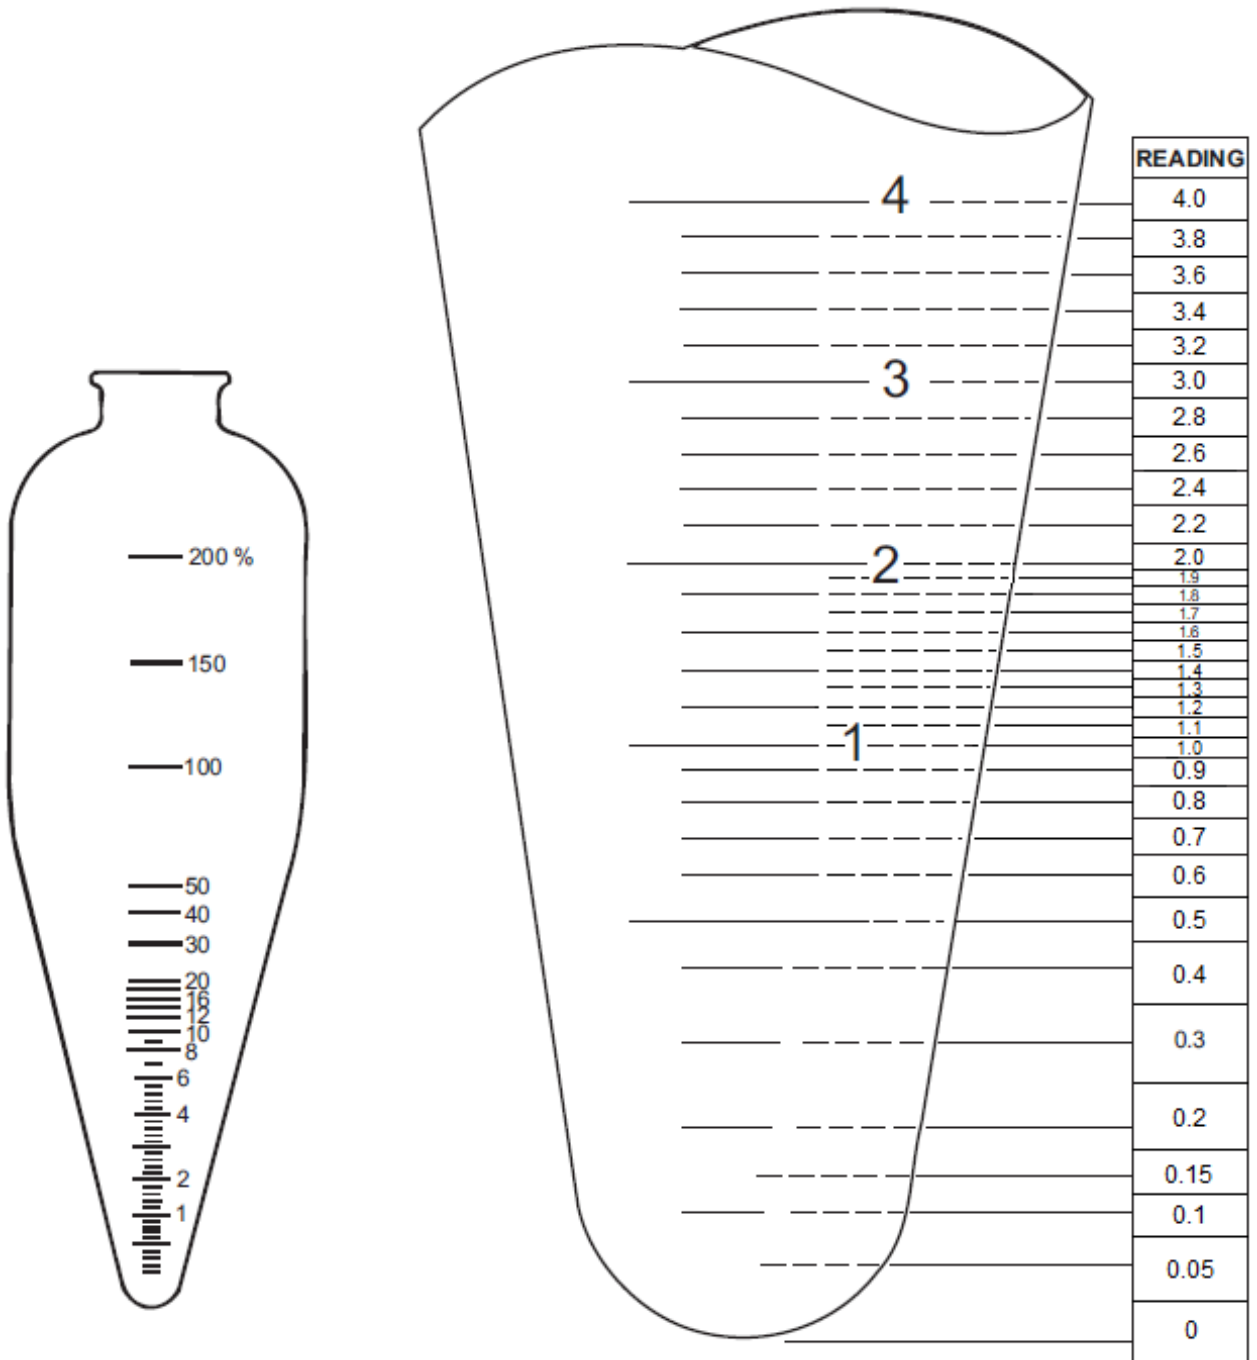


Figure 2—Reading a 200-Part Centrifuge Tube

Table 3—Procedure for Reading a 200-Part Cone-Shaped Tube

Volume (%)	Read to Nearest (%)
0.0 to 0.2	0.05

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

0.2 to 2.0	0.10
> 2.0	0.20

DRAFT

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

9.2 Determination of Water and Sediment

NOTE: A summary of the requirements for determining sediment and water is provided in Annex D.

1. If toluene or xylene is the solvent, water saturate the toluene or xylene at the test temperature. See Annex B.

NOTE: The degree to which toluene or xylene has an affinity for water is dependent upon the temperature. To ensure that it does not absorb water from the crude oil under test and, thereby, adversely affect the test results, it is critical that the toluene or xylene solvent be saturated with water at the test temperature prior to its use.

2. Fill each of two centrifuge tubes to the 50-milliliter (mL) (100-part) mark with a crude oil aliquot drawn directly from the sampling device or the container in which the sample was mixed. Read the top of the meniscus when measuring the amount of sample added to each tube.
3. Fill each centrifuge tube to the 100-milliliter (mL) (200-part) mark with solvent only or a premix of solvent and demulsifier, as applicable. Read the top of the meniscus when determining the total quantity of solvent and crude oil in each tube. If a premix of solvent and demulsifier is used, take care not to add any free demulsifier. If toluene or xylene is the solvent, take care not to add any free water from the water-saturated solvent.

NOTE: Introduction of free demulsifier from a premix of solvent and demulsifier, and/or free water associated with the water-saturated toluene or xylene will adversely affect the test results.

4. If experience indicates that a demulsifier is required and one has not been premixed with the solvent, add to each tube a quantity of demulsifier-stock solution that has previously been determined to be satisfactory for the crude oil under test.
5. Tightly stopper each centrifuge tube. Invert each tube a minimum of 10 times to ensure the oil and solvent are uniformly mixed.

CAUTION: Each tube should always be inverted at a position below and away from the face and eyes so that contact with the mixture will be avoided if the stopper becomes loose.

6. If a block heater is used, add a non-volatile, non-hazardous liquid to each heater compartment in sufficient quantity to fill the annular space when the centrifuge tube is inserted.

NOTE: The addition of a non-volatile, non-hazardous liquid to the heater compartment enhances heat transfer between the heater and centrifuge tube.

7. Loosen the stopper on each tube to prevent pressure build-up during heating, and immerse each tube to the 100-milliliter (mL) (200-part) mark in a sample heater or water bath.
8. Heat the contents of the tubes to 60 ± 3 °C (140 ± 5 °F). Use a sample thermometer to verify the temperature of the contents in each tube.

NOTE: Experience may indicate that temperatures of 71 ± 3 °C (160 ± 5 °F) or more may be necessary to ensure any paraffin is completely liquefied and promote water separation.

9. Tighten the stopper in each tube. Invert each tube a minimum of 10 times to ensure the oil and solvent are uniformly mixed.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

10. Place the tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g. See Equation 1 and Table 1.

NOTE: Experience may indicate that the spin time needs to be longer than 5 minutes, depending upon the physical properties of the crude oil being tested.

11. Immediately after the centrifuge comes to rest, verify the temperature of the contents of each tube is within 8 °C (15 °F) of the test temperature with a sample thermometer, taking care not to disturb the oil/water interface. If the temperature of the contents of either tube is below the required temperature (test temperature minus 8 °C (15 °F)), adjust the temperature setting for the centrifuge (trunnion cup) and repeat the procedure from Step 7.

NOTE: The test is invalid if the temperature is below the required temperature.

12. Verify the oil/water interface is clear, distinct and readable, and no identifiable layer (e.g., emulsion, congealed paraffin and/or asphaltenes) is present above the interface in each tube. If the interface is unclear or there is an additional layer above the interface, accomplish one or more of the following actions:
 - a. Repeat the procedure from Step 10.
 - b. Repeat the procedure from Step 8 using a test temperature of 71±3 °C (160±5 °F) if not previously accomplished.
 - c. Add additional demulsifier-stock solution and repeat the procedure from Step 5.
 - d. Reinitiate the test from Step 1 for different crude oil aliquots from the same sample.
 - e. Determine the water and sediment content using another API/ASTM test method(s).

NOTE: The test is invalid if the oil/water interface is not clear and distinct, or a distinguishable layer is present above the interface in either tube.

13. While holding the tube in an upright (vertical) position, read and record the total volume of sediment and water (S&W) at the bottom of each tube in accordance with the requirements specified in Figure 1 and Table 2 for 100-milliliter (mL) tubes, or Figure 2 and Table 3 for 200-part tubes.

NOTE: If the sediment and water (S&W) volume in a tube is less than 0.0125 mL (0.025 parts), the total volume of sediment and water (S&W) for the tube should be recorded as 0.000 mL (0.000 parts).

14. Without agitation, loosen the stopper on each tube to prevent pressure build-up during heating, and immerse each tube to the 100-milliliter (mL) (200-part) mark in the sample heater or water bath.
15. Heat the contents of the tubes to 60±3 °C (140±5 °F) or an alternative test temperature, if applicable. Use a sample thermometer to verify the temperature of the contents of each tube.
16. Without agitation, tighten the stopper in each tube.
17. Place the two tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g. See Equation 1 and Table 1.
18. Immediately after the centrifuge comes to rest, verify the temperature of the contents in each tube is within 8 °C (15 °F) of the test temperature with a sample thermometer, taking care not to disturb the oil/water interface. If the temperature of the contents of either tube is below the required temperature (test temperature minus 8 °C (15 °F)), adjust the temperature setting of the centrifuge (trunnion cup) and repeat the procedure from Step 14.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

NOTE: The test is invalid if the temperature is below the required temperature.

19. While holding the tube in an upright (vertical) position, read and record the total volume of sediment and water (S&W) at the bottom of each tube in accordance with the requirements specified in Figure 1 and Table 2 for 100-milliliter (mL) tubes, or Figure 2 or Table 3 for 200-part tubes.

NOTE: If the sediment and water (S&W) volume in a tube is less than 0.0125 mL (0.025 parts), the total volume of sediment and water (S&W) for the tube should be recorded as 0.000 mL (0.000 parts).

20. Compare the last two readings for each tube. If the combined volume of sediment and water (S&W) in each tube is not the same as previously determined, repeat the procedure from Step 14 until two consecutive readings agree for each tube.

NOTE: The readings from the respective tubes need not agree with each other.

21. Record the final volume of sediment and water (S&W) in each tube.
22. Compare the test results from the two centrifuge tubes. If the difference between the results from the respective tubes is greater than the limit specified in Table 4 for 100-milliliter (mL) tubes or Table 5 for 200-part tubes, repeat the procedure from Step 1. Otherwise, proceed to Section 10 for final calculation and reporting of the test results.

NOTE: The test is invalid if the two readings differ by more than the applicable limit from Table 4 or Table 5.

Table 4 – Allowable Difference between Results from Two 100-milliliter (mL) Tubes

Result from Tube with Highest S&W Content (mL)	Acceptable Difference Between Tubes (mL)
0.000 to 0.500	0.050
Above 0.500 to 2.000	0.100

Table 5 – Allowable Difference between Results from Two 200-Part Tubes

Result from Tube with Highest S&W Content (Parts)	Acceptable Difference Between Tubes (Parts)
0.000 to 1.000	0.100
Above 1.000 to 4.000	0.200

9.3 Determination of Sediment Only

NOTE: A summary of the requirements for determining sediment and water is provided in Annex E.

NOTE: Water saturation of toluene or xylene is not required because the objective of this test is to determine the sediment content only. Water absorption into, or dropout from, the toluene or xylene has no bearing on the test results.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

1. Fill each of two centrifuge tubes to the 50-milliliter (mL) (100-part) mark with a crude oil aliquot drawn directly from the sampling device or the container in which the sample was mixed. Read the top of the meniscus when measuring the amount of sample added to each tube.

DRAFT

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

2. Fill each centrifuge tube to the 100-milliliter (mL) (200-part) mark with solvent only or a premix of solvent and demulsifier, as applicable. Read the top of the meniscus when determining the total quantity of solvent and crude oil in each tube. If a premix of solvent and demulsifier is used, take care not to add any free demulsifier.

NOTE: Introduction of free demulsifier from a premix of solvent and demulsifier will adversely affect the test results.

3. If experience indicates that a demulsifier is required and one has not been premixed with the solvent, add to each tube a quantity of demulsifier-stock solution that has previously been determined to be satisfactory for the crude oil under test.
4. Add 3 to 4 drops (approximately 0.15 to 0.20 milliliters (mL)) of demineralized or distilled water to each tube.

5. Tightly stopper each centrifuge tube. Invert each tube a minimum of 10 times to ensure the oil and solvent are uniformly mixed.

CAUTION: Each tube should always be inverted at a position below and away from the face and eyes so that contact with the mixture will be avoided if the stopper becomes loose.

6. If a block heater is used, add a non-volatile, non-hazardous liquid to each heater compartment in sufficient quantity to fill the annular space when the centrifuge tube is inserted.

NOTE: The addition of a non-volatile, non-hazardous liquid to the heater compartment enhances heat transfer between the heater and centrifuge tube.

7. Loosen the stopper on each tube to prevent pressure build-up during heating, and immerse each tube to the 100-milliliter mark in a sample heater or water bath.

8. Heat the contents of the tubes to 71 ± 3 °C (160 ± 5 °F). Use a sample thermometer to verify the temperature of the contents in each tube.

9. Tighten the stopper in each tube. Invert each tube a minimum of 10 times to ensure the oil and solvent are uniformly mixed.

10. Place the tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g. See Equation 1 and Table 1.

NOTE: Experience may indicate that the spin time needs to be longer than 5 minutes, depending upon the physical properties of the crude oil being tested.

11. Immediately after the centrifuge comes to rest, verify the temperature of the contents in each tube is within 8 °C (15 °F) of the test temperature with a sample thermometer, taking care not to disturb the oil/water interface. If the temperature of the contents of either tube is below the required temperature (test temperature minus 8 °C (15 °F)), adjust the temperature setting of the centrifuge (trunnion cup) and repeat the procedure from Step 7.

NOTE: The test is invalid if the temperature is below the required temperature.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

12. Verify the oil/water interface is clear, distinct and readable, and no identifiable layer (e.g., emulsion, congealed paraffin and/or asphaltenes) is present above the interface in each tube. If the interface is unclear or there is an additional layer above the interface, accomplish one or more of the following actions:
 - a. Repeat the procedure from Step 10.
 - b. Add additional demulsifier-stock solution and repeat the procedure from Step 5.
 - c. Reinitiate the test from Step 1 for different crude oil aliquots from the same sample.
 - d. Determine the sediment content using another API/ASTM test method(s).

NOTE: The test is invalid if the oil/water interface is not clear and distinct, or a distinguishable layer is present above the interface in either tube.

13. While holding the tube in an upright (vertical) position, read and record the sediment volume at the bottom of each tube in accordance with the requirements specified in Table 2 and Figure 1 for 100-milliliter (mL) tubes or Table 2 and Figure 2 for 200-part tubes.

NOTE: If the sediment volume in a tube is less than 0.0125 mL (0.025 parts), the volume of sediment for the tube should be recorded as 0.000 mL (0.000 parts).

14. Without agitation, loosen the stopper on each tube to prevent pressure build-up during heating, and immerse each tube to the 100-milliliter (mL) (200-part) mark in the sample heater or water bath.
15. Heat the contents of the tubes to $71\pm 3^{\circ}\text{C}$ ($160\pm 5^{\circ}\text{F}$). Use a sample thermometer to verify the temperature of the contents of each tube.
16. Without agitation, tighten the stopper in each tube.
17. Place the two tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g. See Equation 1 and Table 1.
18. Immediately after the centrifuge comes to rest, verify the temperature of the contents in each tube is within 8°C (15°F) of the test temperature with a sample thermometer, taking care not to disturb the oil/water interface. If the temperature of the contents of either tube is below the required temperature (test temperature minus 8°C (15°F)), adjust the temperature setting of the centrifuge (trunnion cup) and repeat the procedure from Step 14.

NOTE: The test is invalid if the temperature is below the required temperature.

19. While holding the tube in an upright (vertical) position, read and record the volume of sediment at the bottom of each tube in accordance with the requirements specified in Table 2 and Figure 1 for 100-milliliter (mL) tubes, or Table 2 and Figure 2 for 200-part tubes.

NOTE: If the sediment volume in a tube is less than 0.0125 mL (0.025 parts), the volume of sediment for the tube should be recorded as 0.000 mL (0.000 parts).

20. Compare the last two readings for each tube. If the volume of sediment in each tube is not the same as previously determined, repeat the procedure from Step 14 until two consecutive readings agree for each tube.

NOTE: The readings from the respective tubes need not agree with each other.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

21. Record the final volume of sediment in each tube.
22. Compare the test results from the two centrifuge tubes. If the difference between the results from the respective tubes is greater than the limit specified in Table 4 for 100-milliliter (mL) tubes or Table 5 for 200-part tubes, repeat the procedure from Step 1. Otherwise, proceed to Section 10 for final calculation and reporting of the test results.

NOTE: The test is invalid if the two readings differ by more than the applicable limit from Table 4 or Table 5.

10 Calculation and Reporting of Results

10.1 General

The methodology for calculating the test result is dependent upon the type of tubes used.

10.2 100-milliliter (mL) Tubes

For 100-milliliter (mL) tubes, add the final readings from the two tubes and report the resultant sum as the percentage by volume of sediment and water (S&W) or sediment only to three decimal points. Table 6 summarizes the calculation and reporting requirements for combinations of tube readings up to 0.150 milliliters (mL).

10.3 200-part Tubes

For 200-part tubes, average the final readings from the two tubes and report the result as the percentage by volume of sediment and water (S&W) or sediment only to three decimal points. Table 6 summarizes the calculation and reporting requirements for combinations of tube readings up to 0.300 parts.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Table 6 – Calculation and Reporting of Test Results

100-mL Tubes Volume of water and/or sediment (mL)		200-Part Tubes Volume of water and/or sediment (Parts)		Read and Recorded Total water and/or sediment
Tube 1	Tube 2	Tube 1	Tube 2	(%)
< 0.0125	< 0.0125	< 0.025	< 0.025	0.000
< 0.0125	0.025	< 0.025	0.050	0.025
< 0.0125	0.050	< 0.025	0.100	0.050
0.025	0.025	0.050	0.050	0.050
0.025	0.050	0.050	0.100	0.075
0.025	0.075	0.050	0.150	0.100
0.050	0.050	0.100	0.100	0.100
0.050	0.075	0.100	0.150	0.125
0.050	0.100	0.100	0.200	0.150
0.075	0.075	0.150	0.150	0.150
0.075	0.100	0.150	0.200	0.175
0.100	0.100	0.200	0.200	0.200
0.100	0.150	0.200	0.300	0.250
0.150	0.150	0.300	0.300	0.300

NOTE 1: 100-mL Tubes—If the total water and/or sediment volume for both tubes is less than 0.0125 mL, the water and sediment volume shall be recorded as 0.000%.

NOTE 2: 200-Part Tubes—If the total water and/or sediment volume for both tubes is less than 0.025 parts, the water and sediment volume shall be reported as 0.000 %.

11 Precision

No precision for the test method described herein has been established. This is a field method. Experience has shown that the determination of both water and sediment using this test method has sometimes been as precise as other accepted test methods.

12 Bias

Since there is no accepted reference material suitable for determining the bias for the procedure described in these sections for measuring water and/or sediment in crude oil by the centrifuge method (field procedure), no statement about bias is being made.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Annex A (informative)

Precautionary Information

A.1 Physical Characteristics and Fire Considerations

Information regarding particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

A.1.1 Kerosine (ASTM D3699)

The typical characteristics of kerosine are a distillation range of 205 °C to 300 °C (401 °F to 572 °F), a minimum flash point of 38 °C (100 °F), and a maximum freezing point of -30 °C (-22 °F).

Caution—Kerosine is combustible and should be kept away from heat, sparks, or open flame. Kerosine containers should be kept closed when they are not in use. Fires should be extinguished with foam, dry chemical, or carbon dioxide. Spills should be soaked up with clay, diatomaceous earth, or a similar material.

A.1.2 Stoddard Solvent

The typical characteristics of Stoddard solvent are a distillation range of 149 °C to 208 °C (300 °F to 407 °F), a minimum flash point of 38 °C (100 °F), and an aromatics plus olefins content of less than 20 percent by volume.

Caution—Stoddard solvent is combustible and should be kept away from heat, sparks, or open flame. Stoddard solvent containers should be kept closed when they are not in use. Fires should be extinguished with foam, dry chemical, or carbon dioxide. Spills should be soaked up with clay, diatomaceous earth, or a similar material.

A.1.3 Toluene

The typical characteristics of toluene are a minimum flash point of 4 °C (40 °F), an ignition temperature of 480 °C (896 °F), a boiling point of 111 °C (231 °F), an upper flammability limit of 7.1 percent by volume, a lower flammability limit of 1.2 percent by volume, a molecular weight of 92, an American Public Health Association (APHA) color of ten (per ASTM D1209), a boiling range (initial to dry point) of 2.0 °C (3.6 °F) [recorded boiling point of 110.6 °C (231.1 °F)], and 0.001 % residue after evaporation. Toluene passes the American Chemical Society (ACS) test for substances darkened by H₂SO₄.

Caution—Toluene is flammable and should be kept away from heat, sparks, or open flame. Toluene containers should be kept closed when they are not in use. Fires should be extinguished with water spray, foam, dry chemical, or carbon dioxide. Spills should be soaked up with clay, diatomaceous earth, or a similar material.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Xylene

The typical characteristics of xylene are a minimum flash point of 27 °C (81 °F), an ignition temperature of 527 °C (982 °F), a boiling point of 139 °C (282 °F), an upper flammability limit of 7.0 percent by volume, a lower flammability limit of 1.1 percent by volume, a molecular weight of 106, an APHA color of not more than ten (per ASTM D1209), a boiling range of 137 °C to 144 °C (279 °F to 291 °F), and 0.002 percent residue after evaporation. Xylene passes the ACS test for substances darkened by H₂SO₄.

Caution—Xylene is flammable and should be kept away from heat, sparks, or open flame. Xylene containers should be kept closed when they are not in use. Fires should be extinguished with water spray, foam, dry chemical, or carbon dioxide. Spills should be soaked up with clay, diatomaceous earth, or a similar material.

A.2 Safety and Health Considerations

A.2.1 General Considerations

Potential health effects that result from chemical exposure depend on the chemical concentration and the length of exposure. Everyone should minimize exposure to chemicals. The following general precautions are suggested.

- a) Minimize skin and eye contact and breathing of vapors.
- b) Keep chemicals away from the mouth, since they can be harmful or fatal if swallowed or aspirated.
- c) Keep chemical containers closed when they are not in use.
- d) Keep work areas well ventilated and as clean as possible.
- e) Promptly clean up spills in accordance with pertinent safety, health, and environmental regulations.
- f) Observe established exposure limits and use proper protective clothing and equipment.

NOTE For permissible exposure limits (PELs), consult the most recent edition of the Occupational Safety and Health Standards, 29 *Code of Federal Regulations* Subpart Z, "Toxic and Hazardous Substances" Section 19101000, and following. Also consult the most recent edition of the ACGIH booklet, *Threshold Limit Values and Biological Exposure*. (See Section 2 for complete reference information.)

A.2.2 Kerosine

Health effects can result from exposure to kerosine through contact with the skin and eyes, breathing of vapors, swallowing, or aspiration. Kerosine can exhibit local irritant properties that may be manifested by dermatitis of the skin, stinging of the eyes, nose, or throat, or respiratory irritation. Acute exposure to kerosine may result in adverse systemic effects including effects on the central nervous, respiratory, or gastrointestinal systems. Symptoms of systemic effects may include vomiting, diarrhea, and in severe cases, drowsiness and central nervous system depression progressing to coma and death.

There may also be long-term (chronic) health effects of varying severity from exposure to kerosine.

Information concerning safety and health risks and proper precautions with respect to particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

A.2.3 Stoddard Solvent

Health effects can result from exposure to Stoddard solvent through contact with the skin and eyes, breathing of vapors, swallowing, or aspiration. Stoddard solvent exhibits local irritant properties that may be manifested by dermatitis of the skin, stinging of the eyes, nose, or throat, or respiratory irritation. Acute exposure to Stoddard solvent may result in adverse systemic effects including effects on the central nervous, respiratory, or gastrointestinal systems. Symptoms of systemic effects may include headache, fatigue, nausea, vomiting, cough, and gastrointestinal or respiratory difficulties.

There may also be long-term (chronic) health effects of varying severity from exposure to Stoddard solvent.

Information concerning safety and health risks and proper precautions with respect to particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

A.2.4 Toluene

Health effects can result from exposure to toluene through contact with the skin and eyes, breathing of vapors, swallowing, or aspiration. Toluene exhibits local irritant properties that may be manifested by dermatitis of the skin, stinging of the eyes, nose, or throat, or respiratory irritation. Acute exposure to toluene may result in adverse systemic effects including effects on the central nervous, cardiovascular, respiratory, or gastrointestinal systems.

Symptoms of acute systemic effects may include headache, fatigue, disturbed vision, dizziness, confusion, numbness of the hands and feet, heart palpitations, anorexia, and gastrointestinal or respiratory difficulties. Overexposure may lead to coma and death.

There may also be long-term (chronic) health effects of varying severity from exposure to toluene.

Information concerning safety and health risks and proper precautions with respect to particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

A.2.5 Xylene

Health effects can result from exposure to xylene through contact with the skin and eyes, breathing of vapors, swallowing, or aspiration. Xylene exhibits local irritant properties that may be manifested by dermatitis of the skin, stinging of the eyes, nose, or throat, or respiratory irritation. Acute exposure to xylene may result in adverse systemic effects including effects on the central nervous, cardiovascular, respiratory, or gastrointestinal systems. Symptoms of acute systemic effects may include headache, fatigue, disturbed vision, dizziness, confusion, numbness of the hands and feet, heart palpitations, anorexia, and gastrointestinal or respiratory difficulties. Overexposure may lead to coma and death.

There may also be long-term (chronic) health effects of varying severity from exposure to xylene.

Information concerning safety and health risks and proper precautions with respect to particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

A.2.6 Demulsifiers

Various chemical demulsifiers may be used in the procedures described in this manual.

Information concerning safety and health risks and proper precautions with respect to particular materials and

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

conditions should be obtained from the employer, the manufacturer or supplier of that material, or the Material Safety Data Sheet.

DRAFT

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Annex B (informative)

Demulsifiers and Water Saturation of Solvents

B.1 Water Saturation of Solvents

B.1.1 Fill each of two centrifuge tubes to the 2-mL (4-part) mark with demineralized or distilled water and then to the 100-mL (200-part) mark with the solvent to be saturated.

B.1.2 Stopper the tubes and shake vigorously for 30 seconds, holding the tubes below eye level, to disperse the water in the solvent. Loosen the stoppers.

B.1.3 Place the tubes containing the water/solvent mixture into a sample preheater. Heat the tubes to 60 °C (140 °F) or other test temperature and maintain this temperature for a minimum of 30 minutes.

B.1.4 Inspect the water/solvent mixture for suspended water droplets before use. If any suspended water is visible, the tubes shall be centrifuged at a temperature of 60 °C (140 °F) or other test temperature for 5 minutes at a speed sufficient to give a relative centrifugal force of 500 g at the tube tip.

B.1.5 Use the top 50-mL (100-parts) of the mixture from each tube for test purposes. Take particular care not to pour any of the free water in the tip of each tube into the sample.

B.2 Demulsifiers

B.2.1 Although a good commercial crude oil demulsifier will work effectively with a wide range of crude oils, there are some crudes for which one demulsifier is more effective than another. Oil-soluble demulsifiers, which are generally used in this procedure, normally consist of an aromatic base (usually xylene or toluene) plus a proprietary active ingredient. Water-soluble demulsifiers normally consist of an alcohol base plus a proprietary active ingredient. For specific information regarding demulsifiers, consult Annex A and the Material Safety Data Sheet for the particular demulsifier in use.

B.2.2 Excessive amounts of demulsifier will cause errors. Demulsifiers do not, in general, contain water, but they do have a limited solubility in the solvent-sample mix and, if added in excessive quantities, can show up after centrifuging as a separate immiscible component at the bottom of the tube. To prevent this problem, the demulsifier should always be used in the form of a demulsifier-stock solution or should be premixed with the solvent to be used in the test. The ratio of demulsifier to solvent should be recorded in order to be able to duplicate results using the solution if necessary. In either case, the quantity of demulsifier to be added to the solvent should be based on tests for the particular demulsifier-solvent solution combination. The demulsifier manufacturer's instructions should be followed when a demulsifier-solvent solution is prepared.

B.2.3 Demulsifiers and demulsifier-solvent solutions should always be stored in accordance with the manufacturer's recommendations. Each container used to store a demulsifier or demulsifier-solvent solution should be dated, and the contents should be discarded when they reach the manufacturer's recommended shelf life.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

DRAFT

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Annex C **(normative)**

Specifications for Centrifuge Tubes

Centrifuge tubes shall be cone-shaped and 8 in. (Figure C-1) or 6 in. (Figure C-2) in length and conform to the dimensions shown. The tubes shall be made of thoroughly annealed glass.

A 100-mL tube shall conform to the dimensions shown in Figure C-1. A 200-part tube shall conform to the dimensions shown in Figure C-2, with the marking for each division multiplied by 2 (for example, 25 mL = 50 parts). The mouth of each tube shall be constricted for closure with a stopper. Graduations for the 8-in. (203-mm) and 6-in. (167-mm) tubes shall be in accordance with the requirements of Table C-1 and Table C-2, respectively. The scale errors for a centrifuge tube shall not exceed the tolerances specified in these tables. The graduation requirements and scale error tolerances shown in Table C-1 and Table C-2 apply to calibrations made by reading the bottom of the shaded meniscus of air-free water at a temperature of 68 °F (20 °C). The graduations on each tube shall be clearly numbered as shown in Figure C-1 and Figure C-2.

The tube graduation marks' accuracy shall be volumetrically verified or gravimetrically certified before field use of the tube, in accordance with ASTM E 542, using National Institute of Standards and Technology (NIST)-traceable equipment. The verification or certification shall include a calibration check at each mark up through the 0.5-mL (1-part) mark; at the 1-, 1.5-, and 2-mL (2-, 3-, and 4-part) marks; and at the 50- and 100-mL (100- and 200-part) marks. The tube shall not be used if the scale error at any mark exceeds the applicable tolerance from Tables 2 or 3. Tubes may have additional marks added at the 0.025-mL and 0.075-mL (0.05- and 0.15-parts) which shall also be volumetrically verified or gravimetrically certified.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

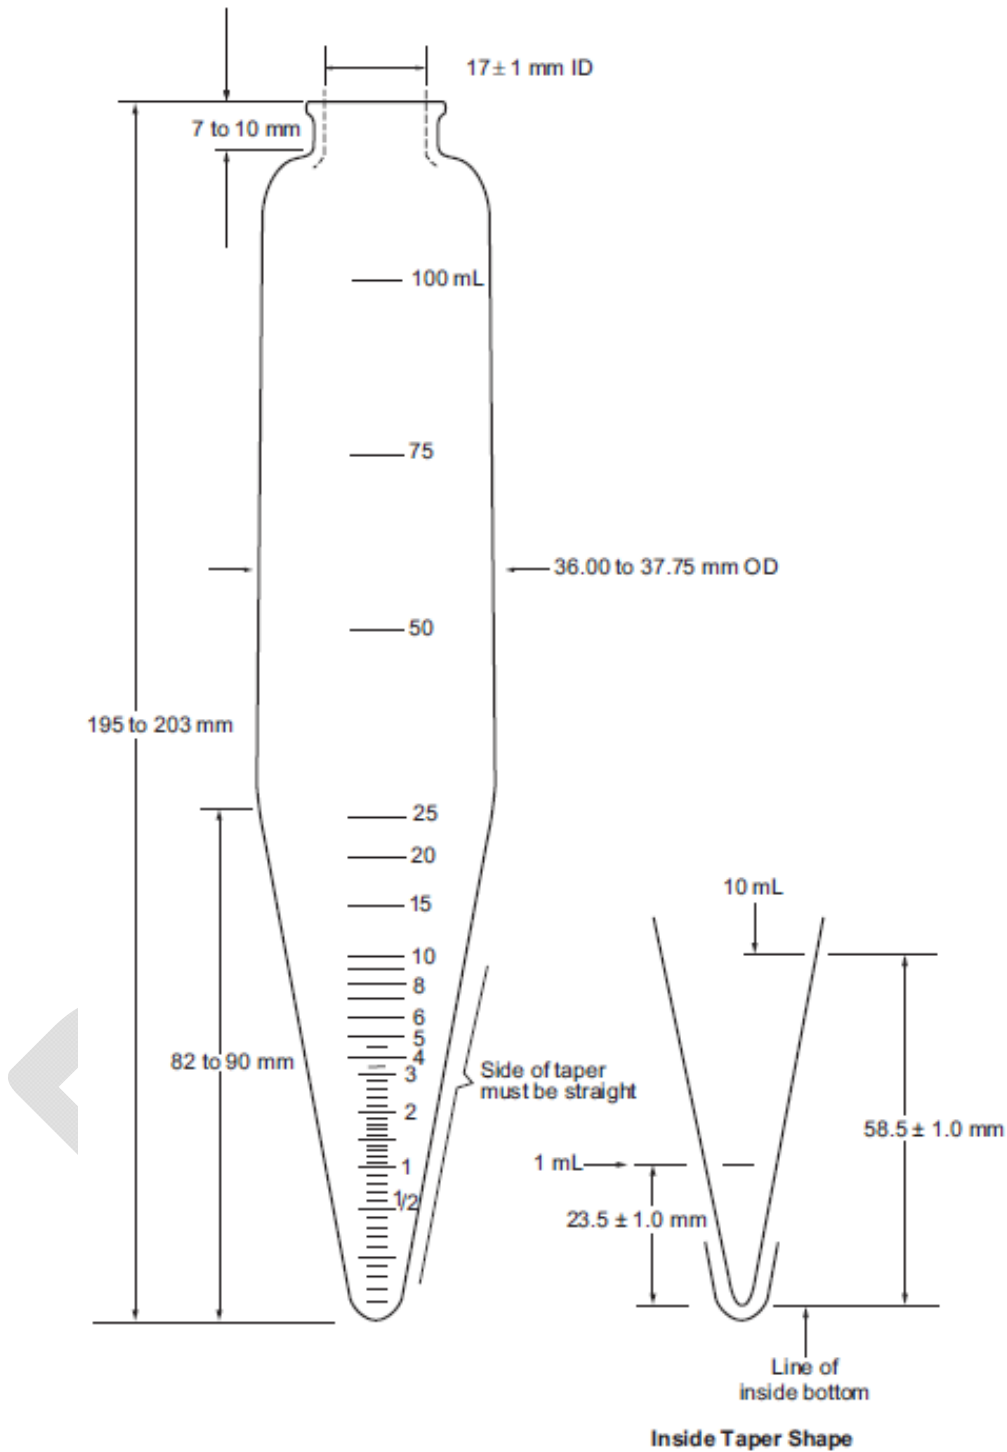


Figure C-1—8-in. (203-mm) Cone-Shaped Centrifuge Tube

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Table C-1—Minimum Graduation Requirements and Maximum Calibration Tolerances for 8-in. (203-mm) Cone-Shaped Tubes

Range	Subdivision (mL)	Volume Tolerance (mL)
Above 0.0 to 0.1	0.05	± 0.02
Above 0.1 to 0.3	0.05	± 0.03
Above 0.3 to 0.5	0.05	± 0.05
Above 0.5 to 1.0	0.10	± 0.05
Above 1.0 to 2.0	0.10	± 0.10
Above 2.0 to 3.0	0.20	± 0.10
Above 3.0 to 5.0	0.50	± 0.20
Above 5.0 to 10.0	1.0	± 0.50
Above 10.0 to 25.0	5.0	± 1.00
Above 25.0 to 100.0	25.0	± 1.00

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

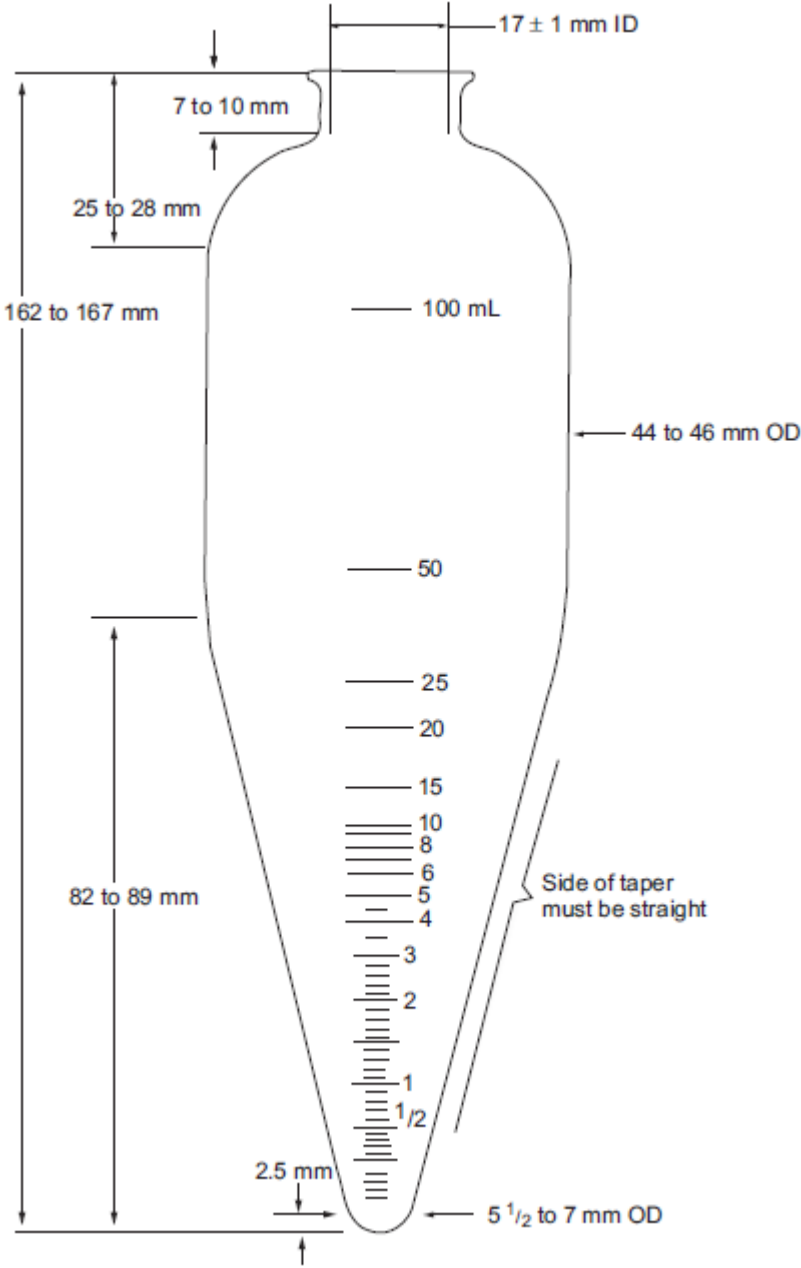


Figure C-2—6-in. (167-mm) Cone-Shaped Centrifuge Tube

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Table C-2—Minimum Graduation Requirements and Maximum Calibration Tolerances for 6-in. (167-mm) Cone-Shaped Tubes

Range	Subdivision (mL)	Volume Tolerance (mL)
Above 0 to 0.1	0.05	± 0.02
Above 0.1 to 0.3	0.05	± 0.03
Above 0.3 to 0.5	0.05	± 0.05
Above 0.5 to 1.0	0.10	± 0.075
Above 1.0 to 1.5	0.10	± 0.10
Above 1.5 to 2.0	0.10	± 0.20
Above 2.0 to 3.0	0.20	± 0.30
Above 3.0 to 5.0	0.50	± 0.50
Above 5.0 to 10.0	1.00	± 0.75
Above 10.0 to 25.0	5.00	± 1.00
Above 25.0 to 100.0	^a	± 1.50
^a Graduations at 50 and 100.		

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Annex D (informative)

Abbreviated Procedure & Calculations Determination of Water and Sediment

NOTE: An abbreviated procedure for determining water and sediment is provided below for convenience. Consult Section 9.2 for additional, alternative or contingent requirements which may also apply.

1.	If toluene or xylene is the solvent, water saturate the toluene or xylene at the test temperature.
2.	Fill each of two centrifuge tubes to the 50-mL (100-part) mark with a crude oil aliquot drawn directly from the sampling device or the container in which the sample was mixed.
3.	Fill each centrifuge tube to the 100-mL (200-part) mark with solvent only or a premix of solvent and demulsifier, as applicable.
4.	If experience indicates that a demulsifier is required and one has not been pre-mixed with the solvent, add a previously determined quantity of demulsifier-stock solution to each tube.
5.	Tightly stopper each centrifuge tube. Invert each tube a minimum of 10 times.
6.	If a block heater is used, add a non-volatile, non-hazardous liquid to each heater compartment in sufficient quantity to fill the annular space when the centrifuge tube is inserted.
7.	Loosen the stopper on each tube, and immerse each tube to the 100-mL (200-part) mark in a sample heater or water bath.
8.	Heat the contents of the tubes to 60 ± 3 °C (140 ± 5 °F).
9.	Tighten the stopper on each tube. Invert each tube a minimum of 10 times.
10.	Place the tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g.
11.	Immediately after the centrifuge comes to rest, verify the temperature of the contents of each tube is within 8 °C (15 °F) of the test temperature. If required, adjust the temperature setting on the centrifuge and repeat the procedure from Step 7.
12.	Verify the oil/water interface is clear, distinct and readable, and an identifiable layer (e.g., emulsion, congealed paraffin and/or asphaltenes) is not present above the interface.
13.	While holding the tube in an upright (vertical) position, read and record the total volume of sediment and water (S&W) in each tube in accordance with Figure 1 and Table 2 (100-mL tubes), or Figure 2 and Table 3 (200-part tubes), as applicable.
14.	Without agitation, loosen the stopper on each tube, and immerse each tube to the 100-mL (200-part) mark in a sample heater or water bath.
15.	Heat the contents of the tubes to 60 ± 3 °C (140 ± 5 °F).
16.	Without agitation, tighten the stopper in each tube.
17.	Place the tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g.
18.	Immediately after the centrifuge comes to rest, verify the temperature of the contents of each tube is within 8 °C (15 °F) of the test temperature. If required, adjust the temperature of the centrifuge, and repeat the procedure from Step 14.
19.	While holding the tube in an upright (vertical) position, read and record the total volume of sediment and water (S&W) in each tube in accordance with Figure 1 and Table 2 (100-mL tubes), or Figure 2 and Table 3 (200-part tubes).
20.	Ensure the last two readings for each tube agree. If not, repeat the procedure from Step 14.
21.	Record the final volume of sediment and water (S&W) in each tube.
22.	Verify the difference between the final readings from the two tubes is within the allowable limit specified in Table 4 (100-mL tubes) or Table 5 (200-part tubes), as applicable.
23.	Calculate and report the final test result as follows: <ol style="list-style-type: none"> a. For 100-mL tubes, add the final readings from the two tubes.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

b. For 200-part tubes, average the final readings from the two tubes.

Annex E (informative)

Abbreviated Procedure & Calculations Determination of Sediment Only

NOTE: An abbreviated procedure for determining sediment only is provided below for convenience. Consult Section 9.3 for additional, alternative or contingent requirements which may also apply.

1.	Fill each of two centrifuge tubes to the 50-mL (100-part) mark with a crude oil aliquot drawn directly from the sampling device or the container in which the sample was mixed.
2.	Fill each centrifuge tube to the 100-mL (200-part) mark with solvent only or a premix of solvent and demulsifier, as applicable.
3.	If experience indicates that a demulsifier is required and one has not been pre-mixed with the solvent, add the previously determined quantity of demulsifier-stock solution to each tube.
4.	Add 3 to 4 drops (approximately 0.15 to 0.20 mL) of demineralized or distilled water to each tube.
5.	Tightly stopper each centrifuge tube. Invert each tube a minimum of 10 times.
6.	If a block heater is used, add a non-volatile, non-hazardous liquid to each heater compartment in sufficient quantity to fill the annular space when the centrifuge tube is inserted.
7.	Loosen the stopper on each tube, and immerse each tube to the 100-mL (200-part) mark in a sample heater or water bath.
8.	Heat the contents of the tubes to 71 ± 3 °C (160 ± 5 °F).
9.	Tighten the stopper on each tube. Invert each tube a minimum of 10 times.
10.	Place the tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g.
11.	Immediately after the centrifuge comes to rest, verify the temperature of the contents of each tube is within 8 °C (15 °F) of the test temperature. If required, adjust the temperature setting on the centrifuge and repeat the procedure from Step 7.
12.	Verify the oil/water interface is clear, distinct and readable, and an identifiable layer (e.g., emulsion, congealed paraffin and/or asphaltenes) is not present above the interface.
13.	While holding the tube in an upright (vertical) position, read and record the sediment volume in each tube in accordance with Figure 1 and Table 2 (100-mL tubes), or Figure 2 and Table 3 (200-part tubes), as applicable.
14.	Without agitation, loosen the stopper on each tube, and immerse each tube to the 100-mL (200-part) mark in a sample heater or water bath.
15.	Heat the contents of the tubes to 71 ± 3 °C (160 ± 5 °F).
16.	Without agitation, tighten the stopper in each tube.
17.	Place the tubes in opposite trunnion cups in the centrifuge, and spin the tubes for at least 5 minutes at a minimum relative centrifugal force of 500 g.
18.	Immediately after the centrifuge comes to rest, verify the temperature of the contents of each tube is within 8 °C (15 °F) of the test temperature. If required, adjust the temperature setting on the centrifuge and repeat the procedure from Step 14.
19.	While holding the tube in an upright (vertical) position, read and record the sediment volume in each tube in accordance with Figure 1 and Table 2 (100-mL tubes), or Figure 2 and Table 3 (200-part tubes).
20.	Ensure the last two readings for each tube agree. If not, repeat the procedure from Step 14.
21.	Record the final volume of sediment in each tube.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

22. Verify the difference between the final readings from the two tubes is within the allowable limit specified in Table 4 (100-mL tubes) or Table 5 (200-part tubes), as applicable.
23. Calculate and report the final test result as follows: a. For 100-mL tubes, add the final readings from the two tubes. b. For 200-part tubes, average the final readings from the two tubes.

DRAFT

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

Bibliography

- [1] OSHA 29 *CFR* Subpart Z², “Toxic and Hazardous Substances,” Section 1910.1000
- [2] API *MPMS* Chapter 8.4, *Standard Practice for Sampling and Handling Fuels for Volatility Measurement*
- [3] ACGIH—*Threshold Limit Values and Biological Exposure Indices for 1987–1988*

DRAFT

² U.S. Department of Labor, Occupational Safety and Health Administration, 200 Constitution Avenue, NW, Washington, DC 20210, www.osha.gov.

This document is not an API Standard; it is under consideration within an API technical committee but has not received all approvals required to become an API Standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of API committee activities except with the approval of the Chairman of the committee having jurisdiction. Copyright API. All rights reserved

DRAFT